VIVOTEK

Pan/Tilt Network Camera
PT7135

Quick Installation Guide

This guide describes the basic functions of PT7135. All detailed information is described in the user's manual.

⚠ Warning Before Install

○ **Power off the Network Camera as soon as it is found smoking or smelt unusual.**

⚠ Contact your distributor when such cases happen.

○ **Keep the Network Camera away from the water. If the Network Camera is wet, power off immediately.**

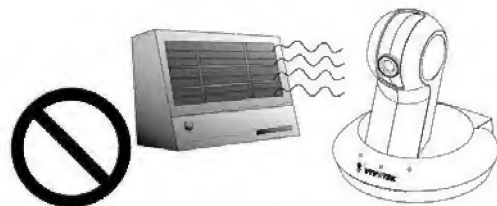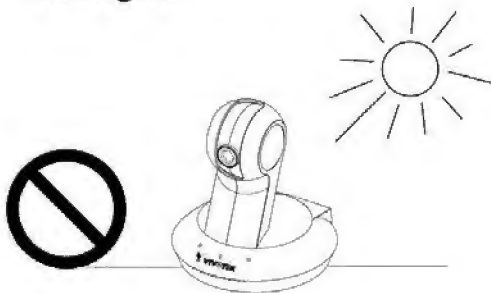⚠ Contact your distributor when such cases happen.

○ **Do not place the Network Camera around the heat sources, such as television or oven.**

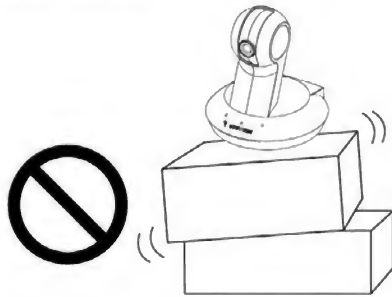○ **Refer to your user's manual for the operating temperature.**

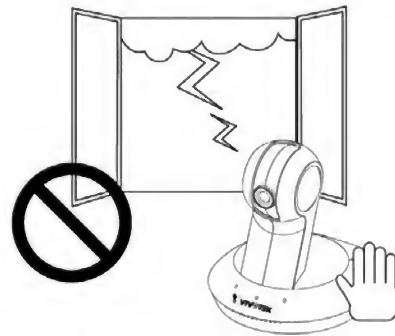○ **Keep the Network Camera away from the direct sunlight.**

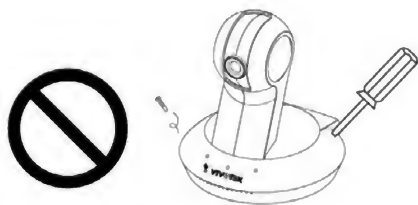○ **Do not place the Network Camera in high humid environments.**

- Do not place the Network Camera on unsteady surfaces.

- Do not touch the Network Camera when it's lightening.

- Do not disassemble the Network Camera.

- Do not drop the Network Camera.

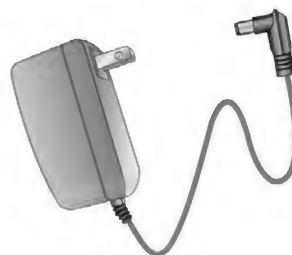- Do not insert any object into the Network Camera, such as needles.
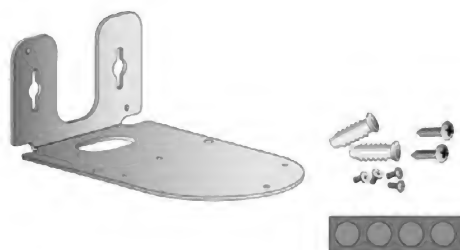
1 Check Package Contents

○ PT7135

○ Power Adapter

○ Camera Mount Kit & Pads

○ Software CD

○ Quick Installation Guide

○ Warranty Card

2 Physical Description

Front

Lens and manual fous ring

Microphone

Status LEDs

Rear

Note the serial number from the label on the unit.

This serial number is the same as the Ethernet address,

for example: 0002D1000019=00-02-D1-00-00-19

Ethernet 10/100 RJ45 socket

Power cord socket
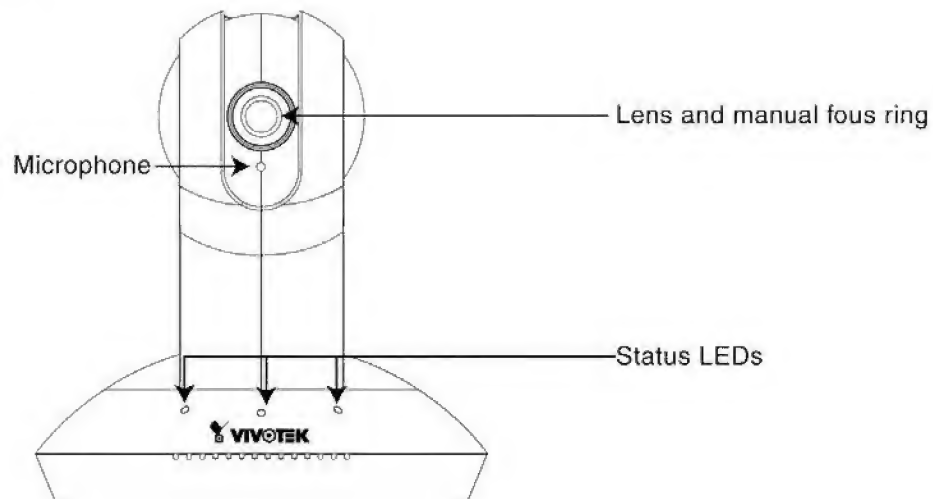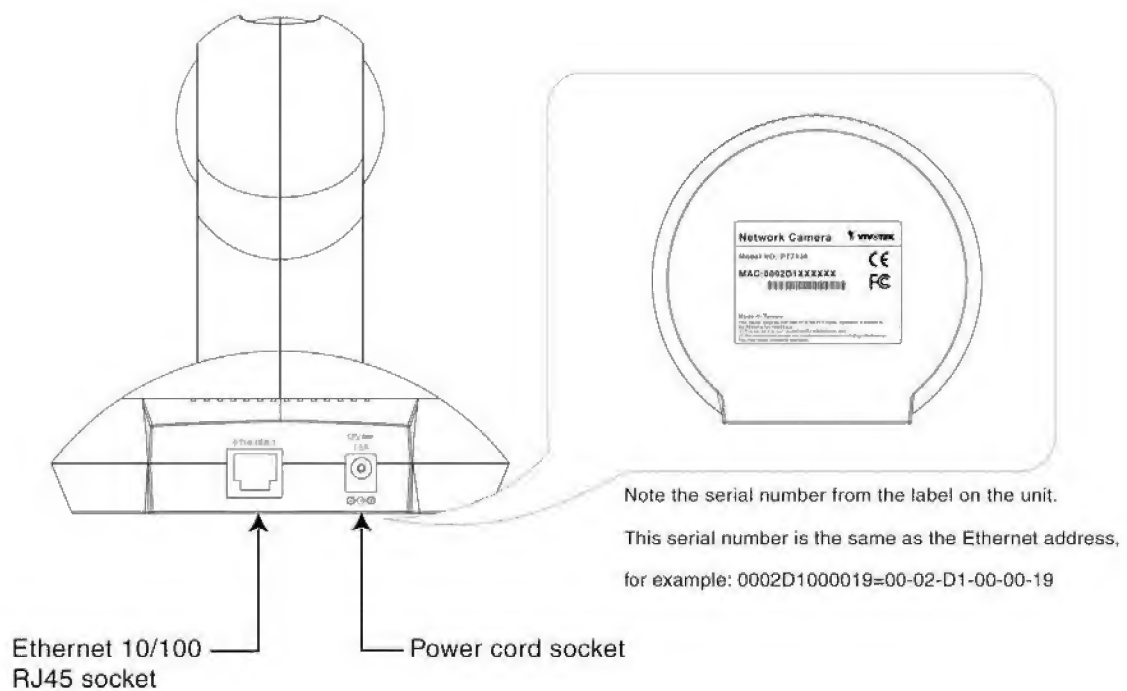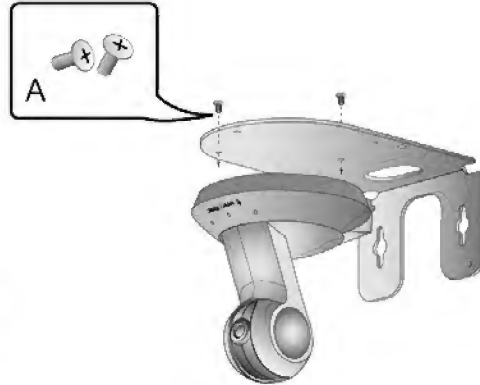
3 Mounting the Camera

○ Ceiling Mount

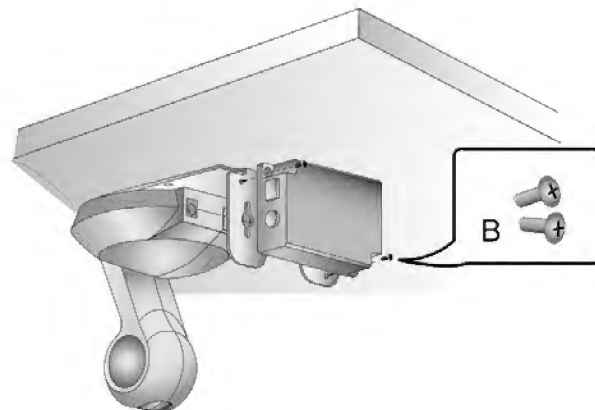1. Fix the camera to the bracket with the two supplied screws (typeA).

✳ TypeA ▯ ⊗   TypeB ▯ ⊕

2. Fix the bracket and camera to the ceiling using the two screws and hollow wall anchors.

3. If adopting POE kit (optional accessory), the POE splitter can be attached to the bracket by using the two supplied screws (typeB).

Wall Mount

1. Fix the bracket to the wall using the two screws and hollow wall anchors.

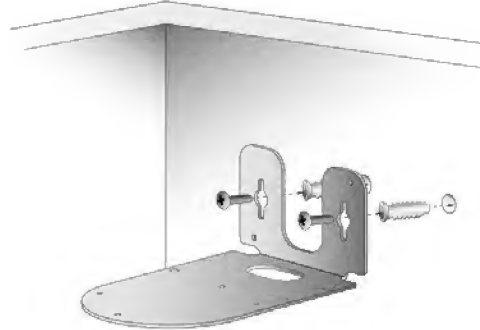2. Fix the camera to the bracket with the two supplied screws (typeA).

3. If adopting POE kit (optional accessory) , the POE splitter can be attached to the bracket by using the two supplied screws (typeB).

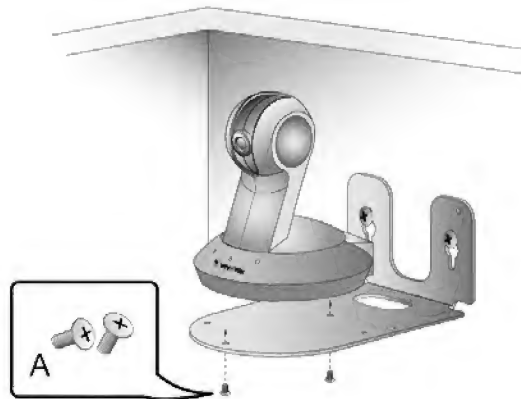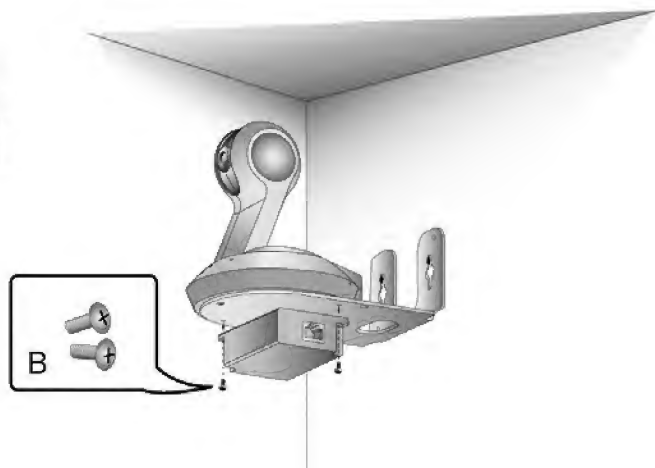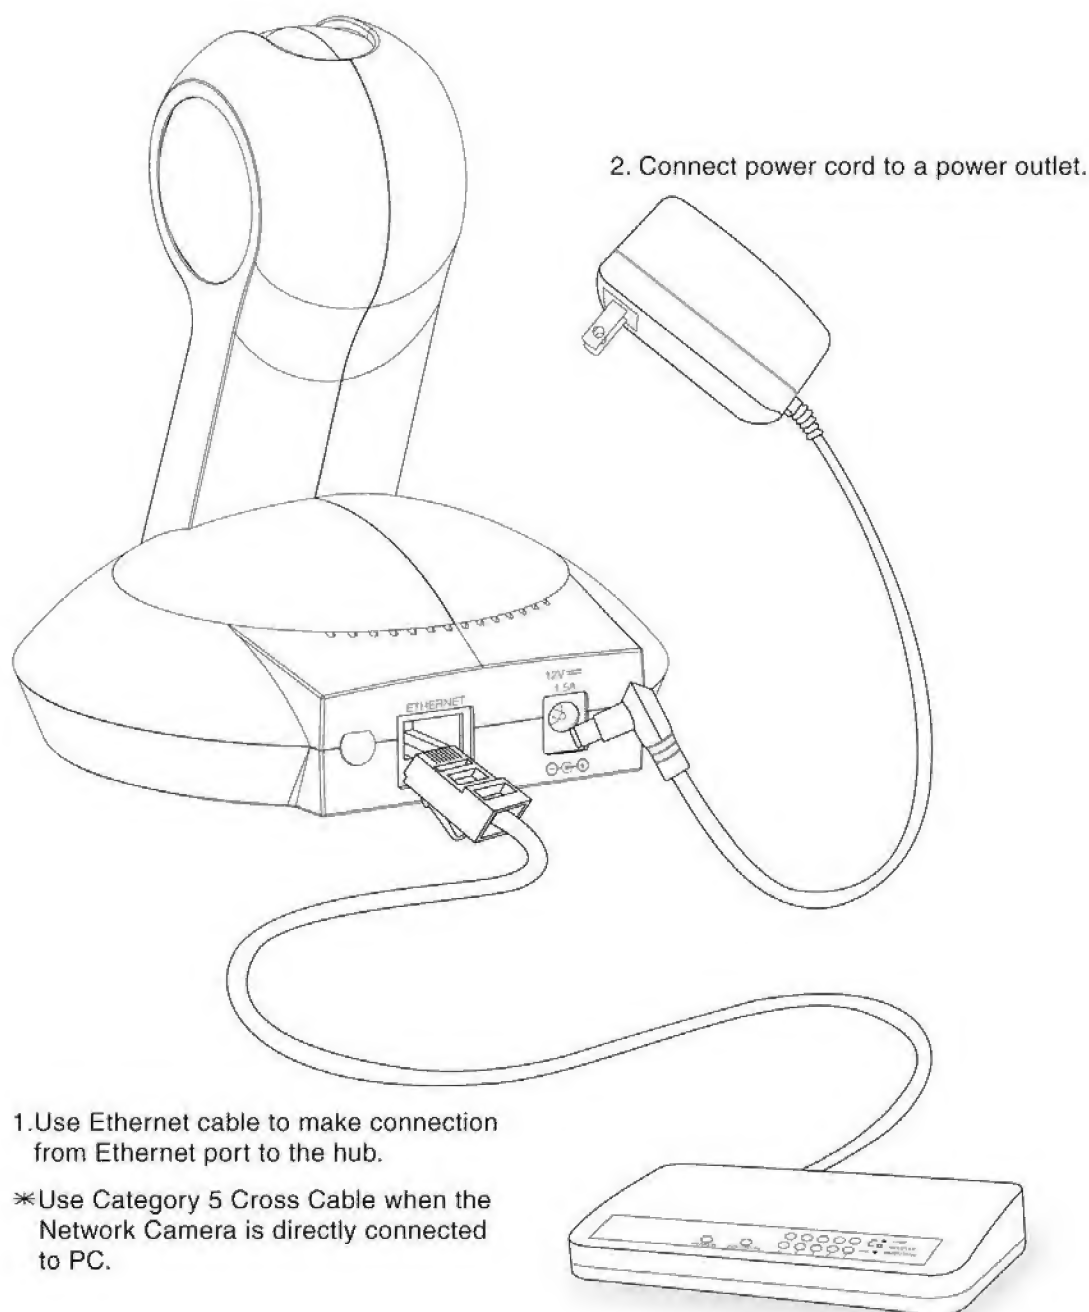2. Connect power cord to a power outlet.

1.Use Ethernet cable to make connection
  from Ethernet port to the hub.

✻Use Category 5 Cross Cable when the
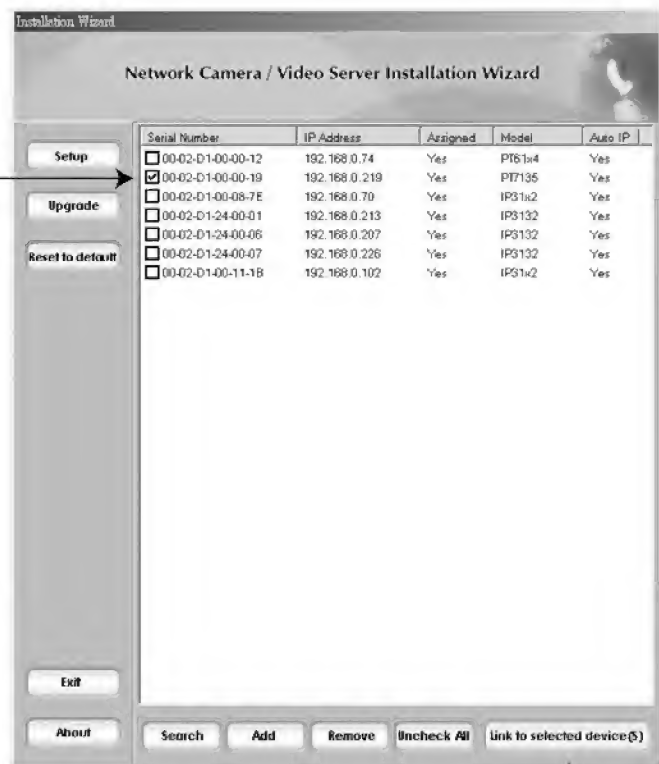 Network Camera is directly connected
  to PC.

⑤ Assign IP Address

1. Run the "Installation Wizard" under the Software Utility directory from software CD.

2. The program will search the servers or cameras on the same LAN.

Status

Searching devices, please wait!

████████████

Installation Wizard

Network Camera / Video Server Installation Wizard
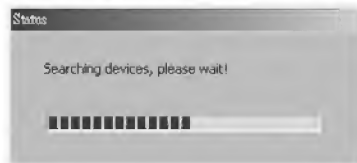
3. After searching, the main installer window will pop up. Click on serial number that matches the one you just noted from ② Physical description

	Serial Number	IP Address	Assigned	Model	Auto IP
☐	00-02-D1-00-00-12	192.168.0.74	Yes	PT61x4	Yes
☑	00-02-D1-00-00-19	192.168.0.219	Yes	PT7135	Yes
☐	00-02-D1-00-08-7E	192.168.0.70	Yes	IP31x2	Yes
☐	00-02-D1-24-00-01	192.168.0.213	Yes	IP3132	Yes
☐	00-02-D1-24-00-06	192.168.0.207	Yes	IP3132	Yes
☐	00-02-D1-24-00-07	192.168.0.226	Yes	IP3132	Yes
☐	00-02-D1-00-11-1B	192.168.0.102	Yes	IP31x2	Yes

Buttons: Setup, Upgrade, Reset to default, Exit, About

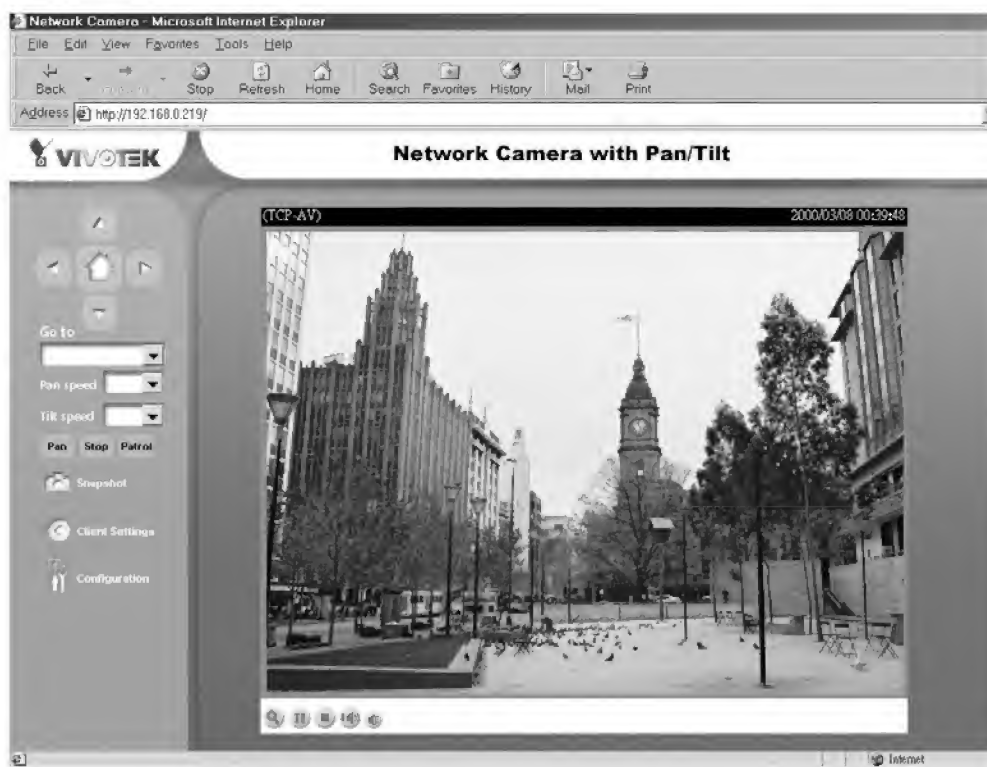**Search | Add | Remove | Uncheck All | Link to selected device(s)**

4. Click "Link to selected device(s)" to connect the Internet Explorer to the Network Camera.

✳ If there is no DHCP server on the LAN, please refer to the user's manual for the methods of assigning an IP address.

For setup further configuration, please check user's manual on the software CD.